


**NPN Silicon RF Transistor**

- For low-noise, high-gain broadband amplifiers at collector currents from 2 mA to 30 mA

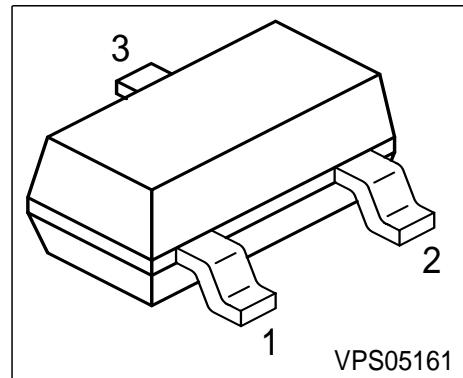

**ESD:** Electrostatic discharge sensitive device, observe handling precaution!

Type	Marking	Pin Configuration			Package
BFR93A	R2s	1 = B	2 = E	3 = C	SOT23

**Maximum Ratings**

Parameter	Symbol	Value	Unit
Collector-emitter voltage	$V_{CEO}$	12	V
Collector-emitter voltage	$V_{CES}$	20	
Collector-base voltage	$V_{CBO}$	20	
Emitter-base voltage	$V_{EBO}$	2	
Collector current	$I_C$	50	mA
Base current	$I_B$	6	
Total power dissipation, $T_S \leq 63^\circ\text{C}$ <sup>1)</sup>	$P_{tot}$	300	mW
Junction temperature	$T_j$	150	$^\circ\text{C}$
Ambient temperature	$T_A$	-65 ... 150	
Storage temperature	$T_{stg}$	-65 ... 150	

**Thermal Resistance**

Junction - soldering point <sup>2)</sup>	$R_{thJS}$	$\leq 290$	K/W
--	------------	------------	-----

<sup>1</sup>  $T_S$  is measured on the collector lead at the soldering point to the pcb

<sup>2</sup> For calculation of  $R_{thJA}$  please refer to Application Note Thermal Resistance

**Electrical Characteristics** at  $T_A = 25^\circ\text{C}$ , unless otherwise specified.

<b>Parameter</b>	<b>Symbol</b>	<b>Values</b>			<b>Unit</b>
		<b>min.</b>	<b>typ.</b>	<b>max.</b>	
<b>DC characteristics</b>					
Collector-emitter breakdown voltage $I_C = 1 \text{ mA}, I_B = 0$	$V_{(\text{BR})\text{CEO}}$	12	-	-	V
Collector-emitter cutoff current $V_{CE} = 20 \text{ V}, V_{BE} = 0$	$I_{CES}$	-	-	100	$\mu\text{A}$
Collector-base cutoff current $V_{CB} = 10 \text{ V}, I_E = 0$	$I_{CBO}$	-	-	100	nA
Emitter-base cutoff current $V_{EB} = 2 \text{ V}, I_C = 0$	$I_{EBO}$	-	-	10	$\mu\text{A}$
DC current gain $I_C = 30 \text{ mA}, V_{CE} = 8 \text{ V}$	$h_{FE}$	50	100	200	-

**Electrical Characteristics** at  $T_A = 25^\circ\text{C}$ , unless otherwise specified.

<b>Parameter</b>	<b>Symbol</b>	<b>Values</b>			<b>Unit</b>
		<b>min.</b>	<b>typ.</b>	<b>max.</b>	
<b>AC characteristics</b> (verified by random sampling)					
Transition frequency $I_C = 30 \text{ mA}, V_{CE} = 8 \text{ V}, f = 500 \text{ MHz}$	$f_T$	4.5	6	-	GHz
Collector-base capacitance $V_{CB} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{cb}$	-	0.58	0.9	pF
Collector-emitter capacitance $V_{CE} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{ce}$	-	0.23	-	
Emitter-base capacitance $V_{EB} = 0.5 \text{ V}, f = 1 \text{ MHz}$	$C_{eb}$	-	1.7	-	
Noise figure $I_C = 5 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_{\text{Sopt}}, f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$F$	-	2	-	dB
		-	3.3	-	
Power gain, maximum available <sup>1)</sup> $I_C = 30 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_{\text{Sopt}}, Z_L = Z_{\text{Lopt}}, f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$G_{ma}$	-	13.5	-	
		-	8.5	-	
Transducer gain $I_C = 30 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_L = 50\Omega, f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$ S_{21e} ^2$	-	12	-	
		-	6.5	-	

<sup>1</sup> $G_{ma} = |S_{21} / S_{12}| (k - (k^2 - 1)^{1/2})$


**SPICE Parameters (Gummel-Poon Model, Berkley-SPICE 2G.6 Syntax) :**
**Transistor Chip Data**

IS =	8.6752	fA	BF =	137.63	-	NF =	0.93633	-
VAF =	20.011	V	IKF =	0.33395	A	ISE =	2619.3	fA
NE =	1.5466	-	BR =	59	-	NR =	0.88761	-
VAR =	26.834	V	IKR =	0.015129	A	ISC =	0.70823	fA
NC =	1.95	-	RB =	7.2326	$\Omega$	IRB =	0.043806	mA
RBM =	3.4649	$\Omega$	RE =	1.0075		RC =	0.13193	$\Omega$
CJE =	3.1538	fF	VJE =	0.70393	V	MJE =	0.5071	-
TF =	33.388	ps	XTF =	0.28319	-	VTF =	0.17765	V
ITF =	2.5184	mA	PTF =	0	deg	CJC =	1039.5	fF
VJC =	0.72744	V	MJC =	0.34565	-	XCJC =	0.21422	-
TR =	1.1061	ns	CJS =	0	fF	VJS =	0.75	V
MJS =	0	-	XTB =	0	-	EG =	1.11	eV
XTI =	3	-	FC =	0.75935	-	TNOM	300	K

All parameters are ready to use, no scaling is necessary.


Extracted on behalf of Infineon Technologies AG by:

Institut für Mobil- und Satellitentechnik (IMST)

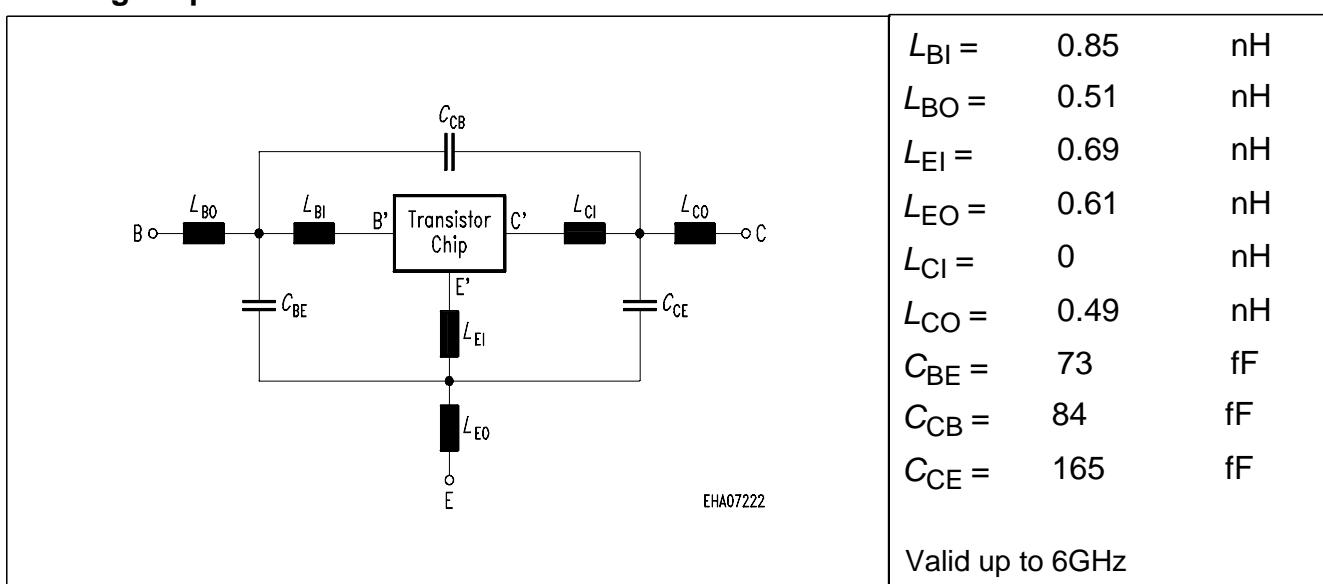
**Package Equivalent Circuit:**


For examples and ready to use parameters please contact your local Infineon Technologies distributor or sales office to obtain a Infineon Technologies CD-ROM or see Internet: <http://www.infineon.com/products/discrete/index.htm>

**Total power dissipation  $P_{\text{tot}} = f(T_S)$**

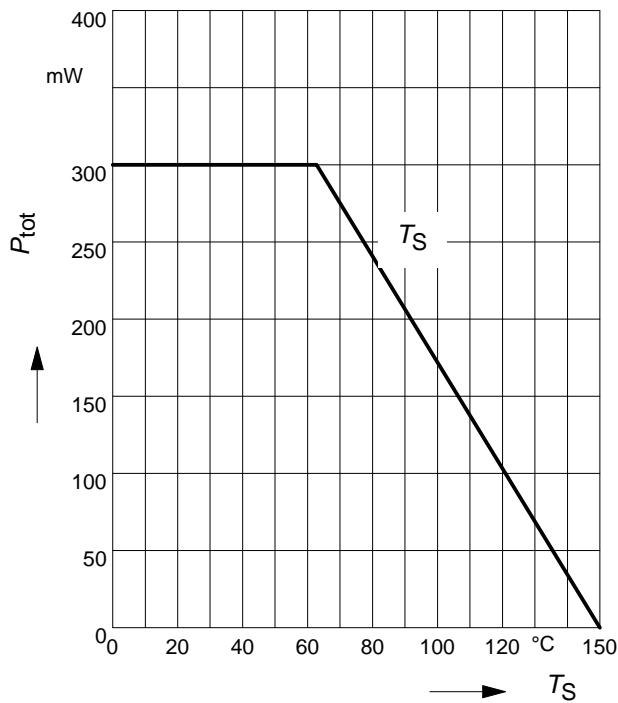


**Permissible Pulse Load  $R_{\text{thJS}} = f(t_p)$**

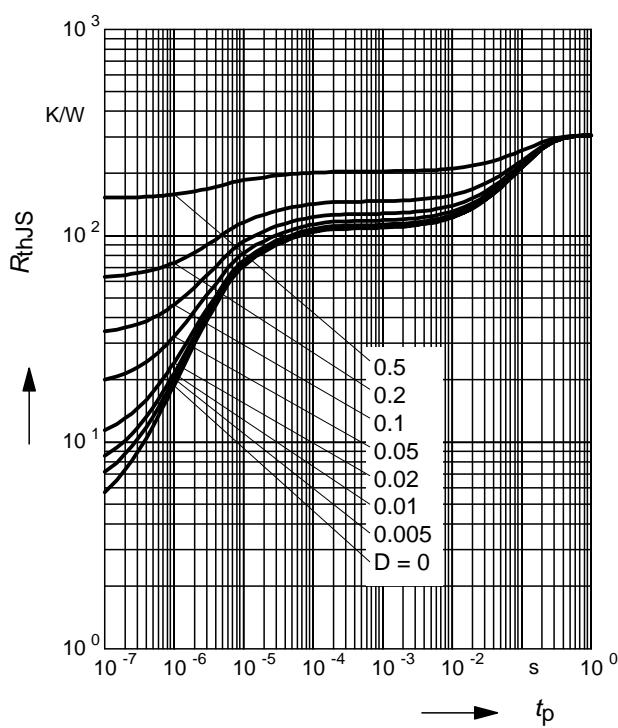


**Permissible Pulse Load**

$$P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$$

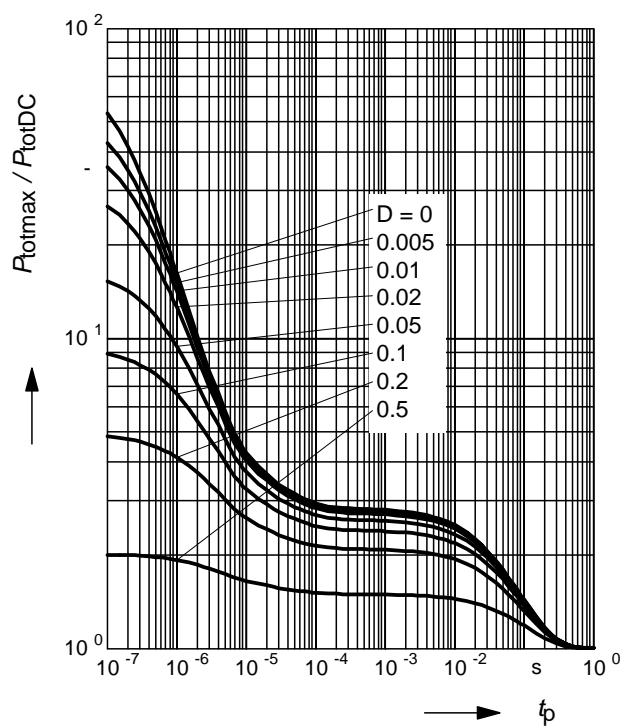


**Collector-base capacitance**  $C_{cb} = f(V_{CB})$   
 $f = 1\text{MHz}$

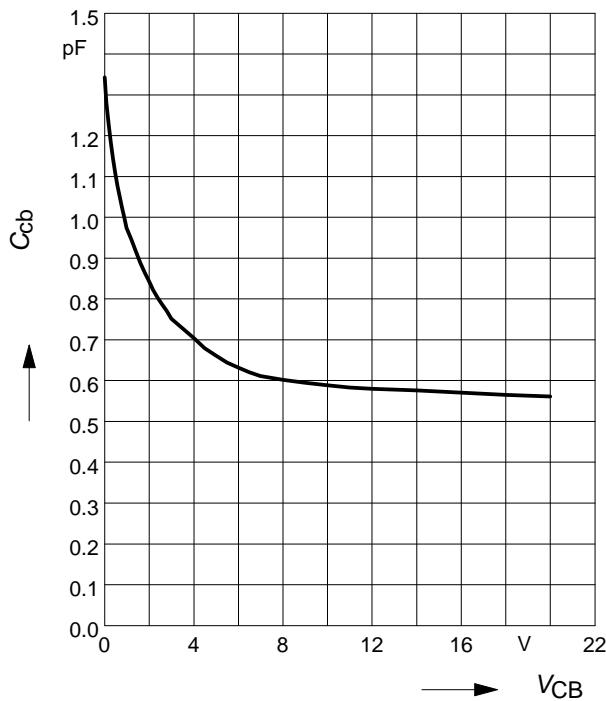


**Power Gain**  $G_{ma}, G_{ms} = f(I_C)$   
 $f = 0.9\text{GHz}$

$V_{CE}$  = Parameter

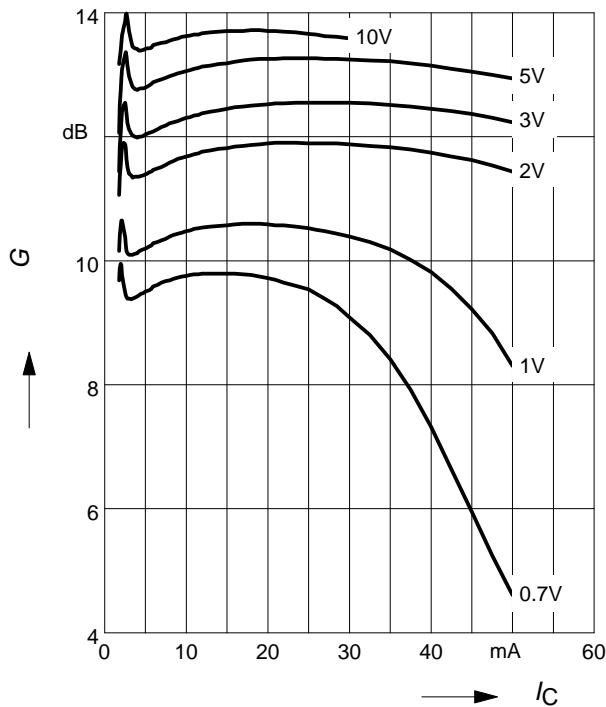

**Transition frequency**  $f_T = f(I_C)$


$V_{CE}$  = Parameter

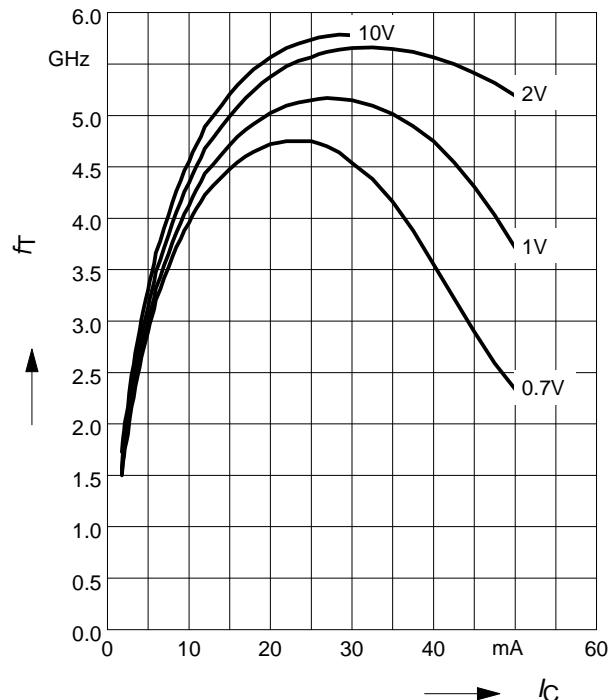

**Power Gain**  $G_{ma}, G_{ms} = f(I_C)$   
 $f = 1.8\text{GHz}$


**Power Gain**  $G_{ma}, G_{ms} = f(I_C)$   
 $f = 1.8\text{GHz}$

$V_{CE}$  = Parameter

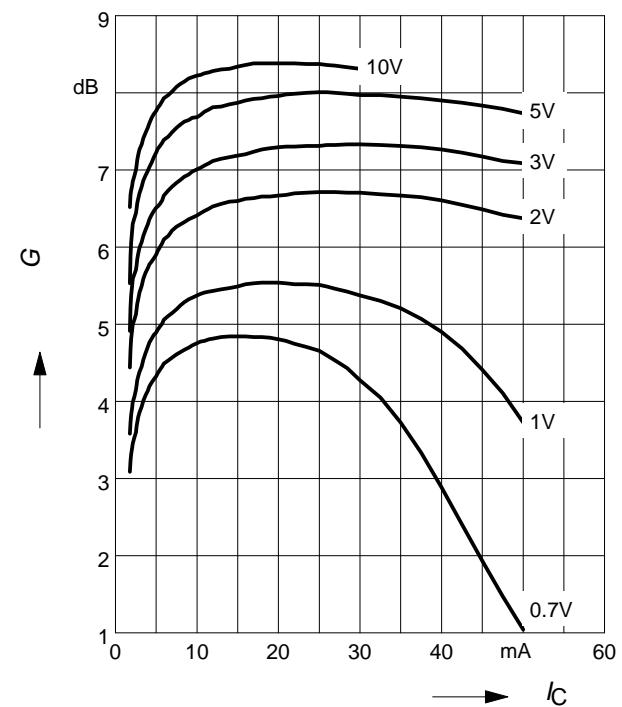


**Power Gain**  $G_{ma}$ ,  $G_{ms} = f(V_{CE})$ :  
 $|S_{21}|^2 = f(V_{CE})$ :-----

$f$  = Parameter

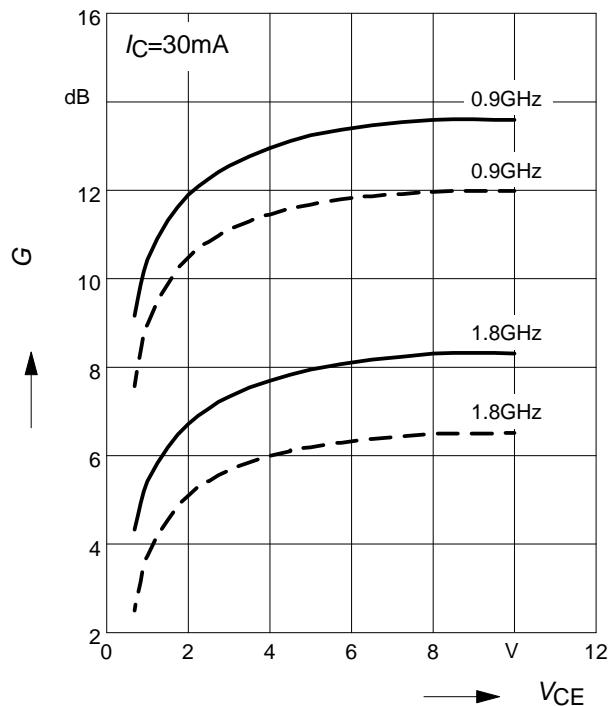


**Power Gain**  $G_{ma}$ ,  $G_{ms} = f(f)$

$V_{CE}$  = Parameter

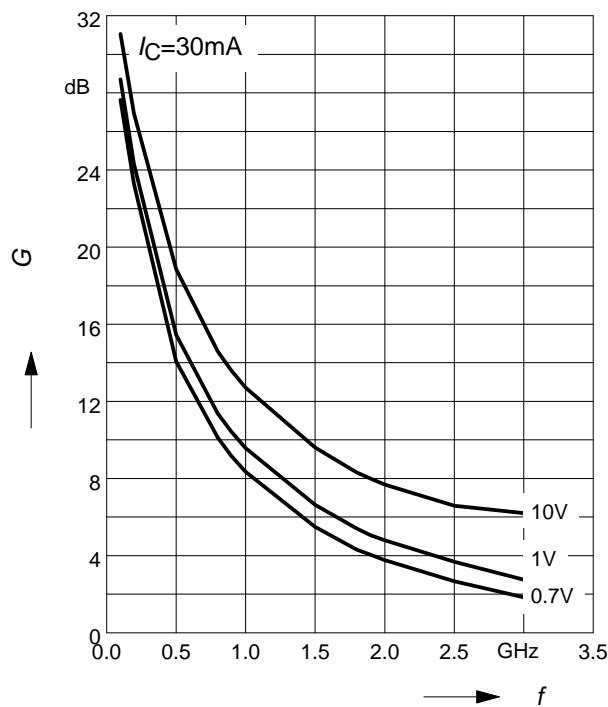

**Intermodulation Intercept Point**  $IP_3 = f(I_C)$   
(3rd order, Output,  $Z_S = Z_L = 50\Omega$ )

$V_{CE}$  = Parameter,  $f = 900\text{MHz}$

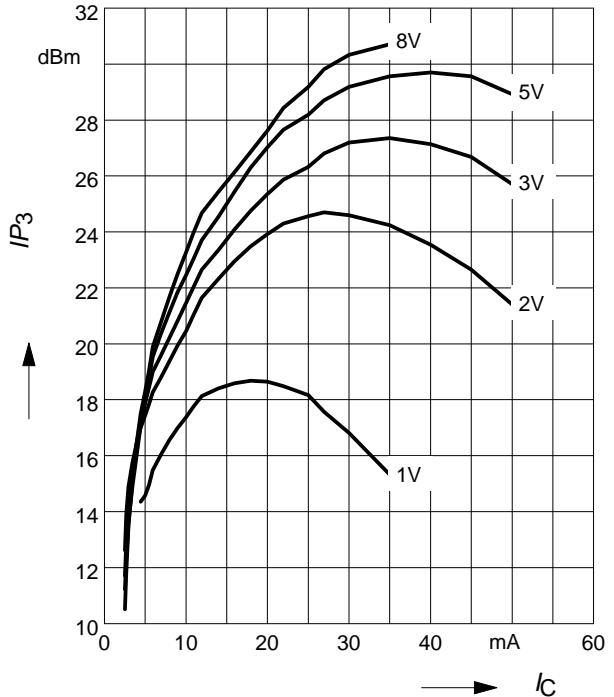

**Power Gain**  $|S_{21}|^2 = f(f)$

$V_{CE}$  = Parameter

